

AMT换挡操纵说明


Operation instructions of AMT column shifter

在使用AMT组合开关之前先接通点火钥匙开关。

Turn on the ignition key switch before operating the AMT combination switch.

D/N/R切换操作

D/N/R switching operation

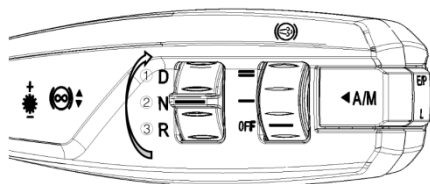

将组合开关旋钮分别旋转到①或②或③代表D挡或N挡或R挡。


Rotate the combination switch knob to ① or ② or ③ respectively to represent D, N or R.

A/M切换（手/自切换）

A/M switching (manual/auto switching)

A/M开关为自复位开关当开关挡位在D挡时，按下A/M开关进行手自一体切换。

The A/M switch is a self-resetting switch. When the switch gear is in D, pressing the A/M switch can switch between manual and auto mode.

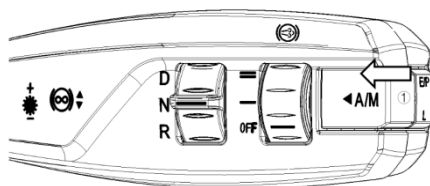


手动升降挡

Manual upshift/downshift

当开关处于D挡时，将手柄向上推到位置①，手动加一挡。When the switch is in D, pushing the handle up to ① can manually upshift one gear.

当开关处于D挡时，将手柄向下推到位置②，手动减一挡。When the switch is in D, pushing the handle down to ② can manually downshift one gear.

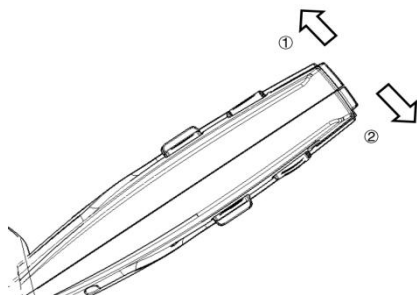


E/P切换、L模式切换（经济模式/动力模式、蠕行模式E/P开关为自复位开关，按压组合开关尾部E/P功能按钮①，可循环切换E/P功能。

E/P switching, L mode switching (economy mode/power mode, creep mode) E/P switch is a self-resetting switch, pressing the E/P function button ① at the end of the combination switch can switch between the E/P functions cyclically.

L开关为自复位开关，按压组合开关尾部L功能按钮②，可循环进入或退出L模式。

L switch is a self-resetting switch. Pressing the L function button ② at the end of the combination switch can cycle into or out of L mode.

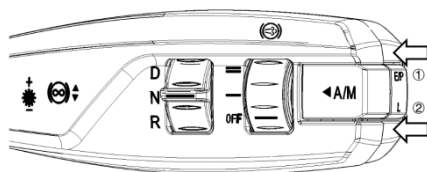

缓速器制动


Retarder braking

将开关向前推动到位置①，手动加一挡。

Pushing the switch forward to ① can manually upshift one gear.

将开关向后推动到位置②，手动减一挡。

Pushing the switch back to ② can manually downshift one gear.

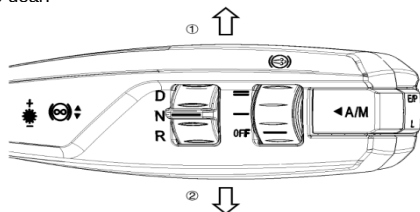


发动机制动（排气制动/JACOB制动）


Engine brake (exhaust brake/JACOB brake)

将组合开关旋钮分别旋转到①或②或③代表关闭或1挡或2挡。

Rotating the combination switch knob to ① or ② or ③ represents off or 1st gear or 2nd gear.

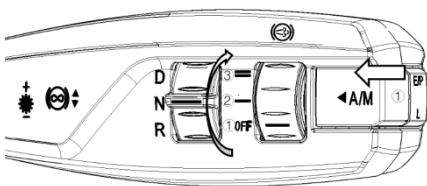

AMT自学习功能 AMT adaptation function

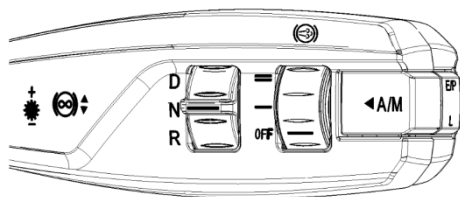

同时按下E/P和A/M按钮，持续5S
Press and hold the E/P and A/M buttons
simultaneously for 5 s